



DESIGNED FOR LARGE PRODUCERS



USER INSTRUCTIONS:

- 1- Read carefully the security instructions (see Warnings  in rear) before using the machine.
- 2- Plug the machine in an outlet.
- 3- Turn on the machine using the Start/Stop switch (A).
- 4- Open the lid (B) using the handle (C) on the top container. The handle allows the lid to open partially with one hand. Finish opening the lid with the other hand.
- 5- Fill the upper container with freshly harvested and pre-cut plants.
- 6- Close the upper container's lid
- 7- Adjust the motor dimmer (D) at 100%
- 8- Slowly open the door at the base of the upper container (E) to empty it in the main container (F).
- 9- Once empty, close the door (E).
- 10- If necessary, slow down the dimmer speed (D) for the plants to stay more on top of the grate surface.
- 11- Let the plants bounce around into the machine for about 1 minute or until obtaining the desired cut.
- 12- Place the dimmer (D) to 100% to help the plants to go out.
- 13- Open the exit door (G) and keep it open until the main container is empty.
- 14- Open the final door (H) to get the cut plants and then, close the door.

REPEAT : Repeat steps 4 to 14 as needed, depending on the quantity of plants to be arranged.


- 15- Turn off the machine using the Start/Stop switch (A).
- 16- Unplug the machine from the outlet.

MAINTENANCE: In order to facilitate the trimming, spray vegetable oil and clean the grate and blades frequently with soap or isopropyl alcohol. This must be done when the machine is not running. Sharpen the blade when necessary. To sharpen them, never remove the blades from the hub (see drawing in rear).

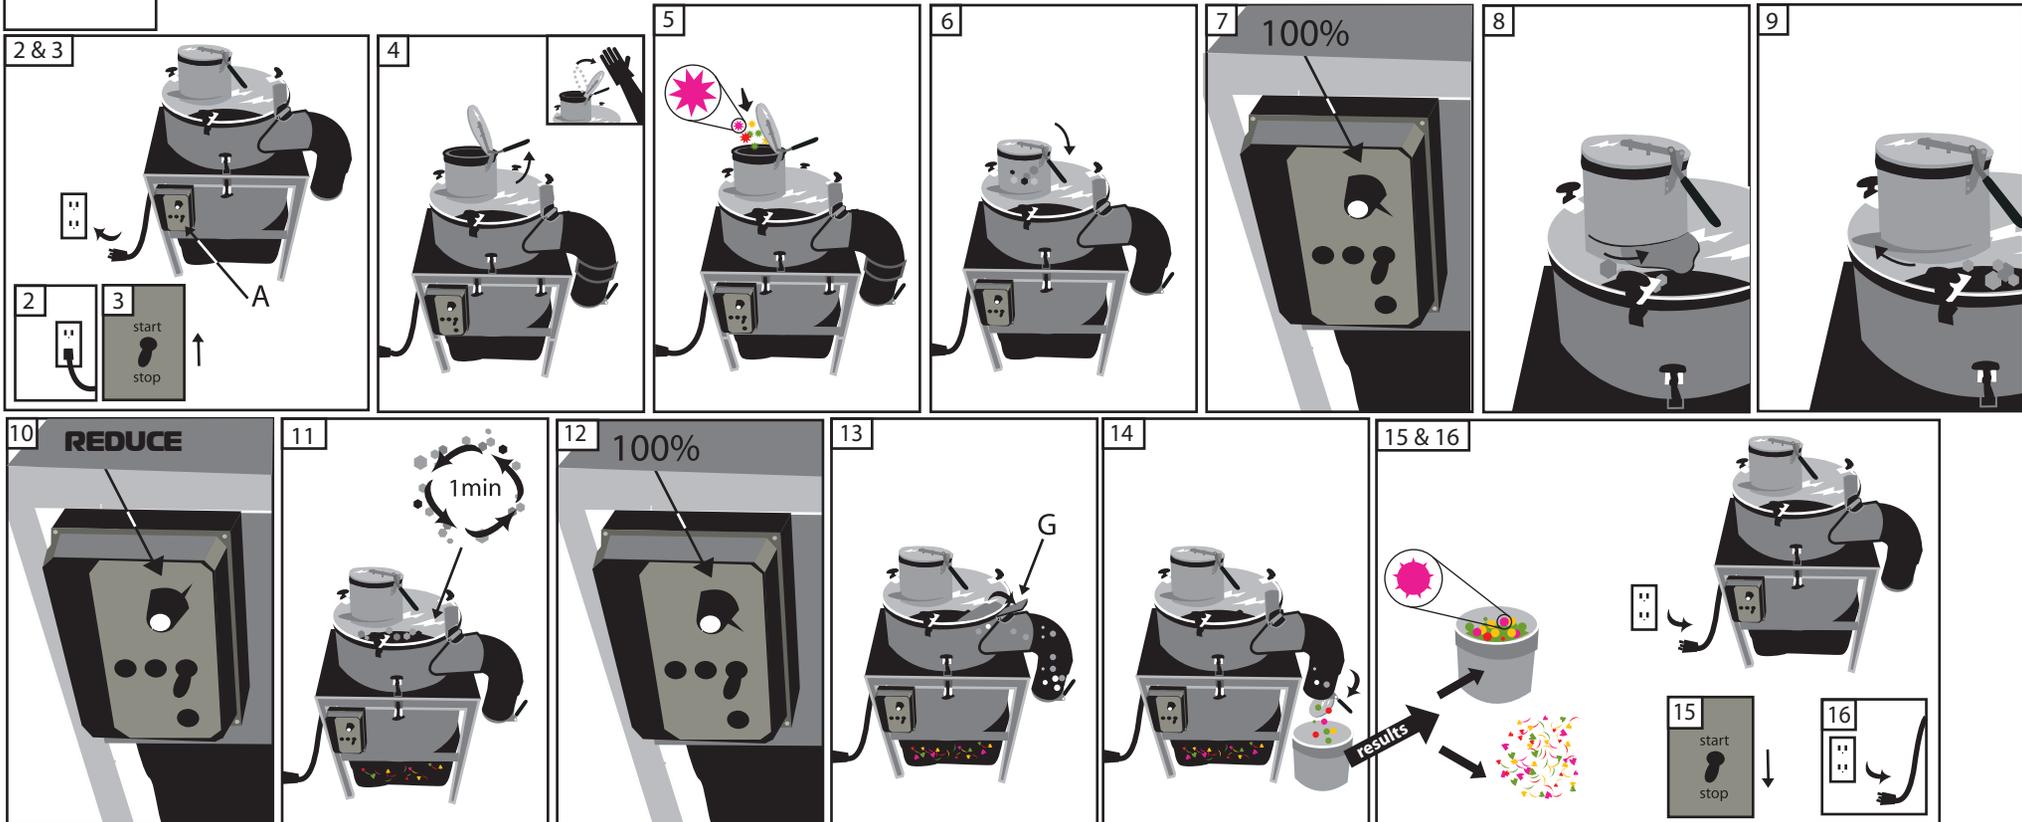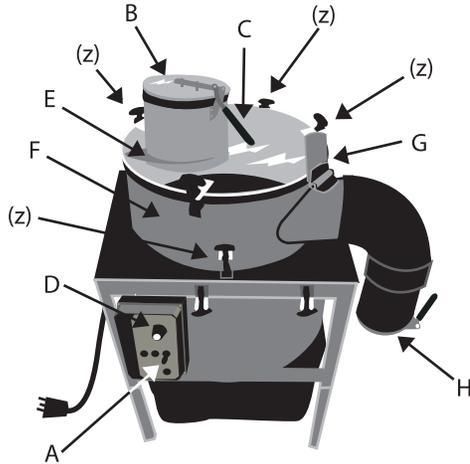




DESIGNED FOR LARGE PRODUCERS

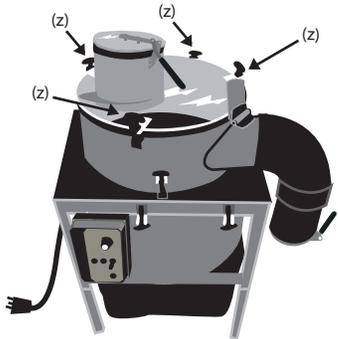

ASSEMBLY :

- 1- Remove the machine and its detached components from the transportation box.
- 2- Unfasten the four rubber fasteners (see part identified as "z" on the drawing on top) attaching the transparent plastic and metal structure; turn it upside down and fix it with the same rubber fasteners.
- 3- Install the four legs and tighten them to the structure with the thumb screws supplied.
- 4- Use the velcro strips at the top of the bag to fix it to the ring beneath the machine.
- 5- Assemble the two black plastic tubes together and install them on the machine.
- 6- Cut the two plastic ties that are holding the electrical box. Place this box outside the machine on the upper left side (see drawing on top of this page for position).
- 7- Fix the box to the structure of the machine using the four screws and the screwdriver supplied.
- 8- Place a bucket below the black plastic tube.

2 plastic ties

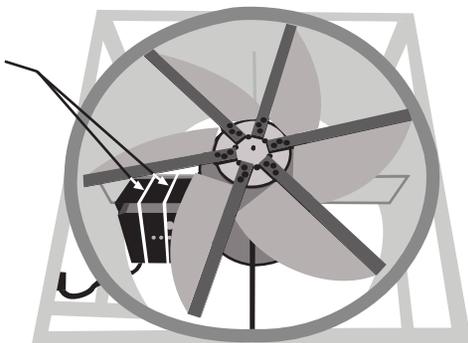

WARNING:


WHEN THE MACHINE IS RUNNING:

- Never place your fingers or the gloves or any other body part in contact with the grate or the blade.
- Never apply pressure on the grate.
- Do not use scissors, knives or any instrument above the grate.
- Safety glasses and gloves are required at all time. The gloves have to be tight enough so they don't get inside the grate slots. A loose glove is dangerous, beware!

ADJUSTMENT OF THE BLADES HEIGHT

To adjust the height of the blades, follow these steps:


- 1- Unscrew both "A" screws (blocking screw), then both "B" screws (tightening screw).
- 2- Turn the "C" screw (height adjustment screw).
To raise the blades, turn clockwise.
To lower the blades, turn counterclockwise.
- 3- Apply pressure on the blades to ensure it is well located.
- 4- Put both "B" screws back.
- 5- Verify if the height of the blade is OK by closing the grate.
If not, return to step 1.
- 6- To finish, put both "A" screws back.

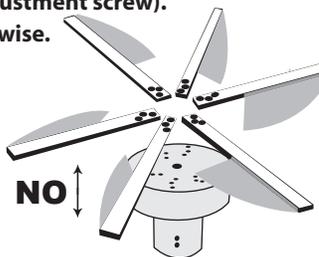


SHARPENING

- 1- Put off the 4 set screws located in the hole on the side of the aluminum hub where the blade is fixed.
- 2- Put off the blade and the hub in one piece from the motor shaft.
- 3- Clean the blade with alcohol.
- 4- Use a grindstone.
- 5- Put a gentle pressure with the top of the blade on the grindstone with the sharpening angle desired.
- 6- Pass the blade on the grindstone with a movement from left to right and from right to left until the blade is properly sharpened.
- 7- Repeat the operation with the bottom of the blade.
- 8- Put back the blade and the aluminum hub on the motor shaft.
- 9- Put back in position the 4 set screws in the hole on the side of the aluminum hub.


ADJUSTMENT SCREWS

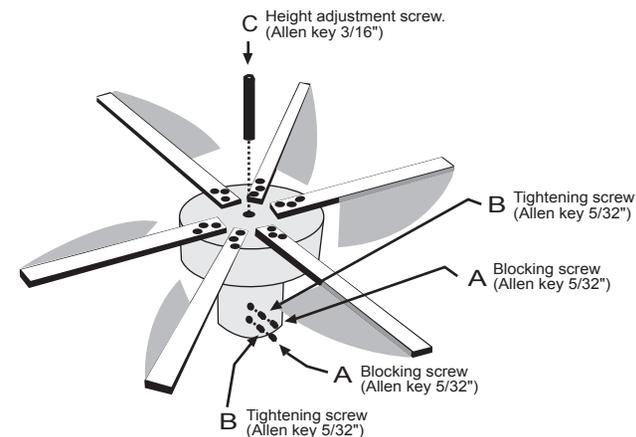

LOWER THE BLADES

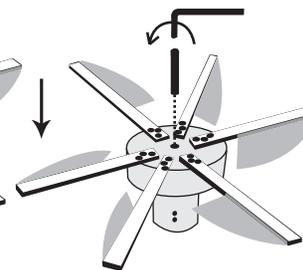

RAISE THE BLADES

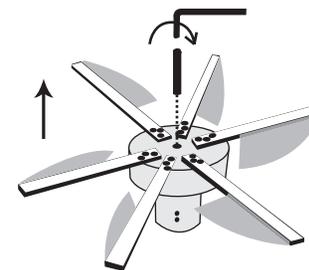

CAUTION



For security reasons, we recommend to keep a distance of at least 1/8 of an inch (3mm) between the grate and the blade.

FOR INFORMATION OR TO ORDER:

VISIT : WWW.TRIMPRO.CA

Contact : info@trimpro.ca

Call (Canada): +1-450-349-0811

Patents : CAN: 2.470.370 USA: 7.168.643

Patent Pending: EUR : 04761713.9

AUS: 2004269786 CE Standard

To be used in accordance with all existing laws and regulations. The manufacturer does not accept any responsibility for damages caused to or by the TRIMPRO XL, resulting from an inadequate use or assembly.

Ref.: 0109